



LENKERMITTELSTREBE

Handlebar cross-strut | Puntal transversal | Renfort de guidon | Montante del manubrio

Art.-Nr: **25036-xxx / 25037-xxx**

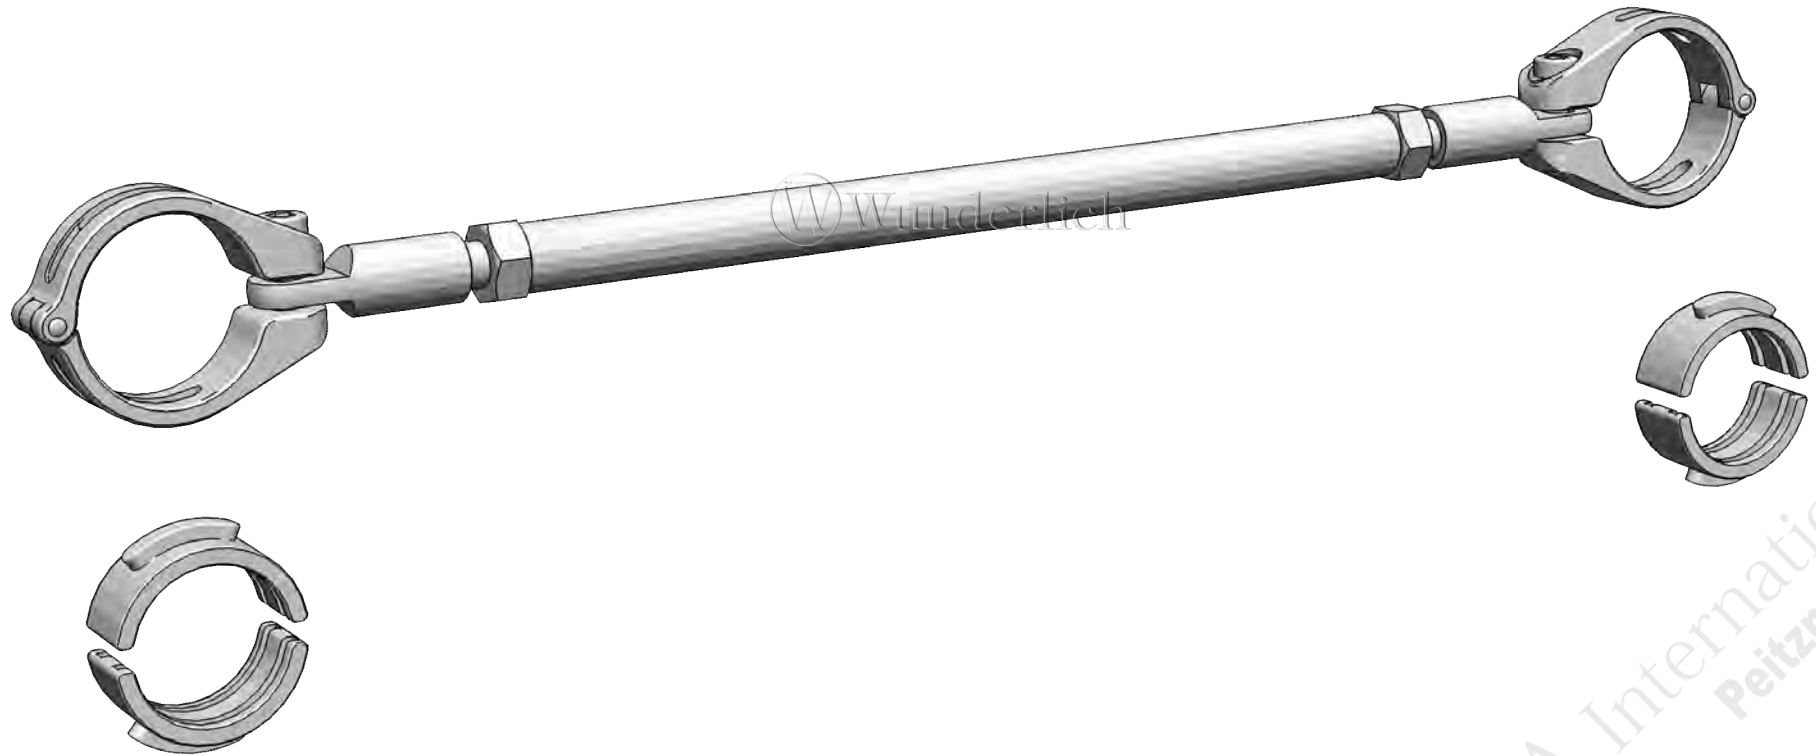

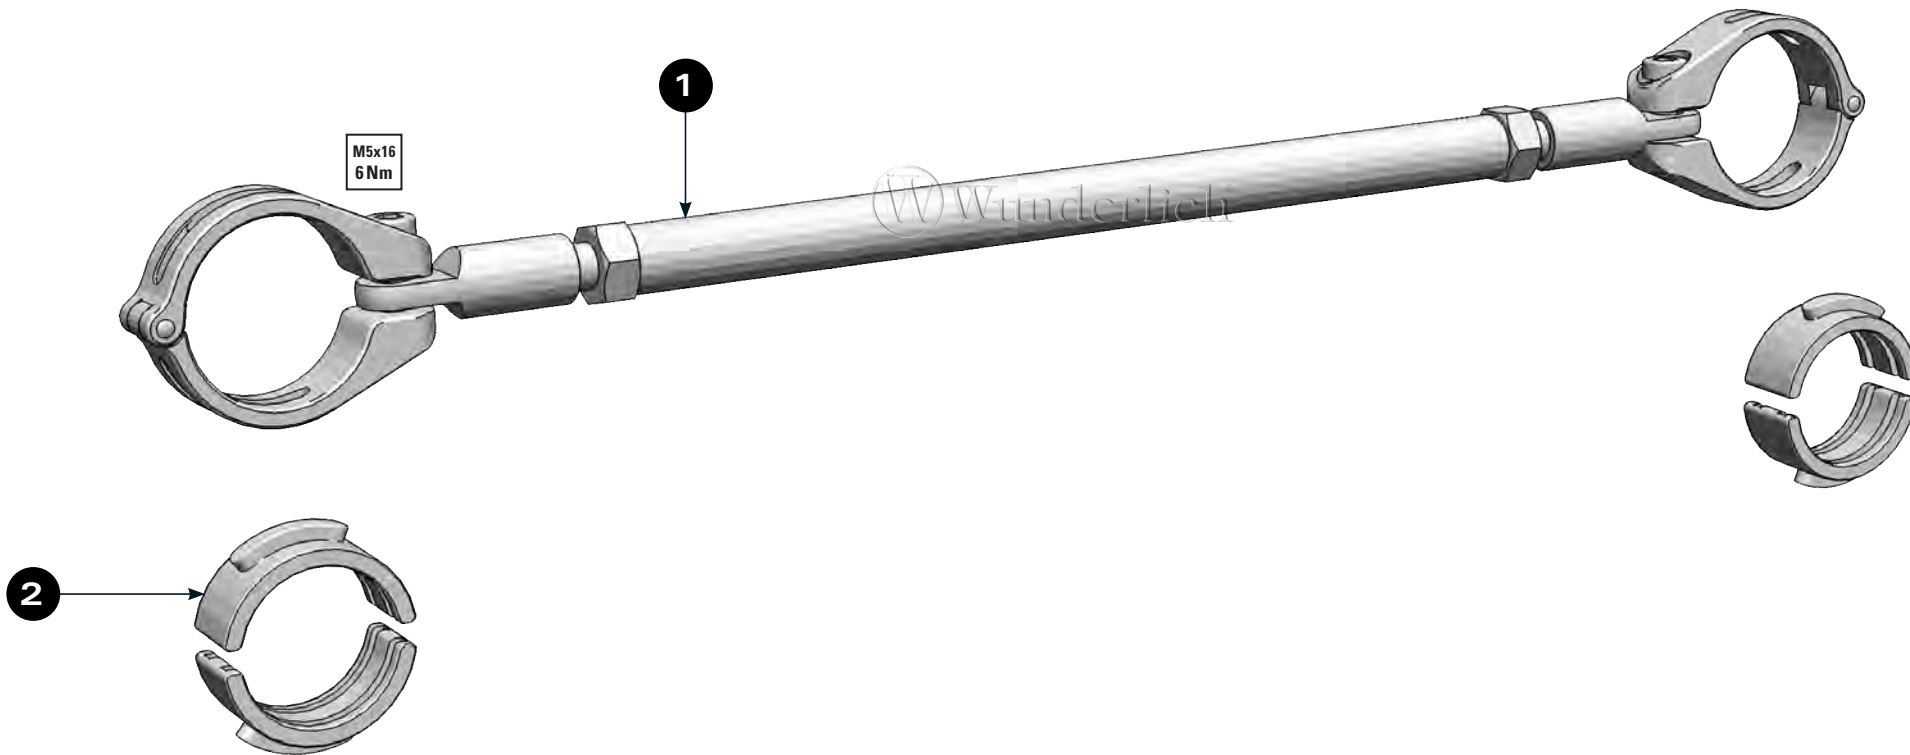

LEGENDE / KEY

- Anbau Tipp
Fitting tip
- Achtung
Attention
- Vergrößerung
Magnification
- Schraube
Screw
- Schraubensicherung
Thread locking fluid
- Drehmoment
Torque

#	BEZEICHNUNG / DESCRIPTION	MENGE / AMOUNT
1	Lenkermittelstrebe vormontiert	1
2	Reduzierung 25.5mm	2
3	Reduzierung 28.5mm	2

! Je nach Fahrzeug-/Lenkertyp müssen die passenden Reduzierungen verwendet werden. Demnach können auch die verschiedenen Reduzierungen Seitengleich kombiniert werden.
It not only depends on the vehicle you´re riding but also on the handlebar mounted to your bike to determine the reductions. Therefore the different reductions can be combined symmetrically to get the perfect size to your bike / handlebar combination.



Lenkerstrebe zentrieren, Klemmschellen montieren und danach die Mittelstrebe fixieren (Mutter Rechts- / Linksgewinde).
Centre the crosstie of the handlebar and mount the clamp. Now fix the center brace with a left- and right-hand thread nut.