



LENKERMITTTELSTREBE

Handlebar cross-strut | Puntal transversal | Renfort de guidon | Montante del manubrio

Art.-Nr: 25036-xxx / 25037-xxx

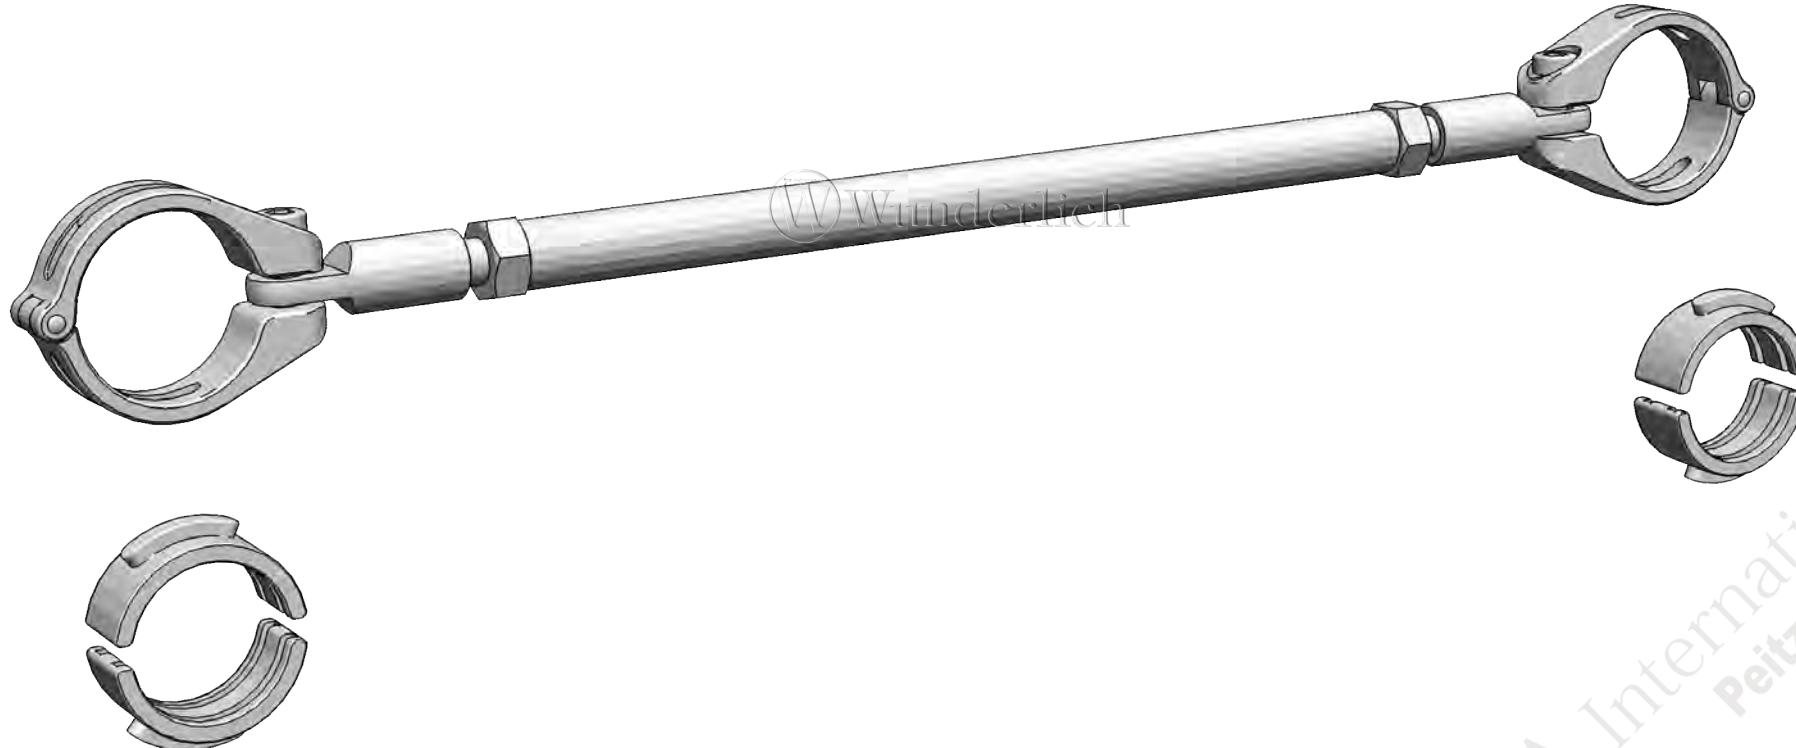

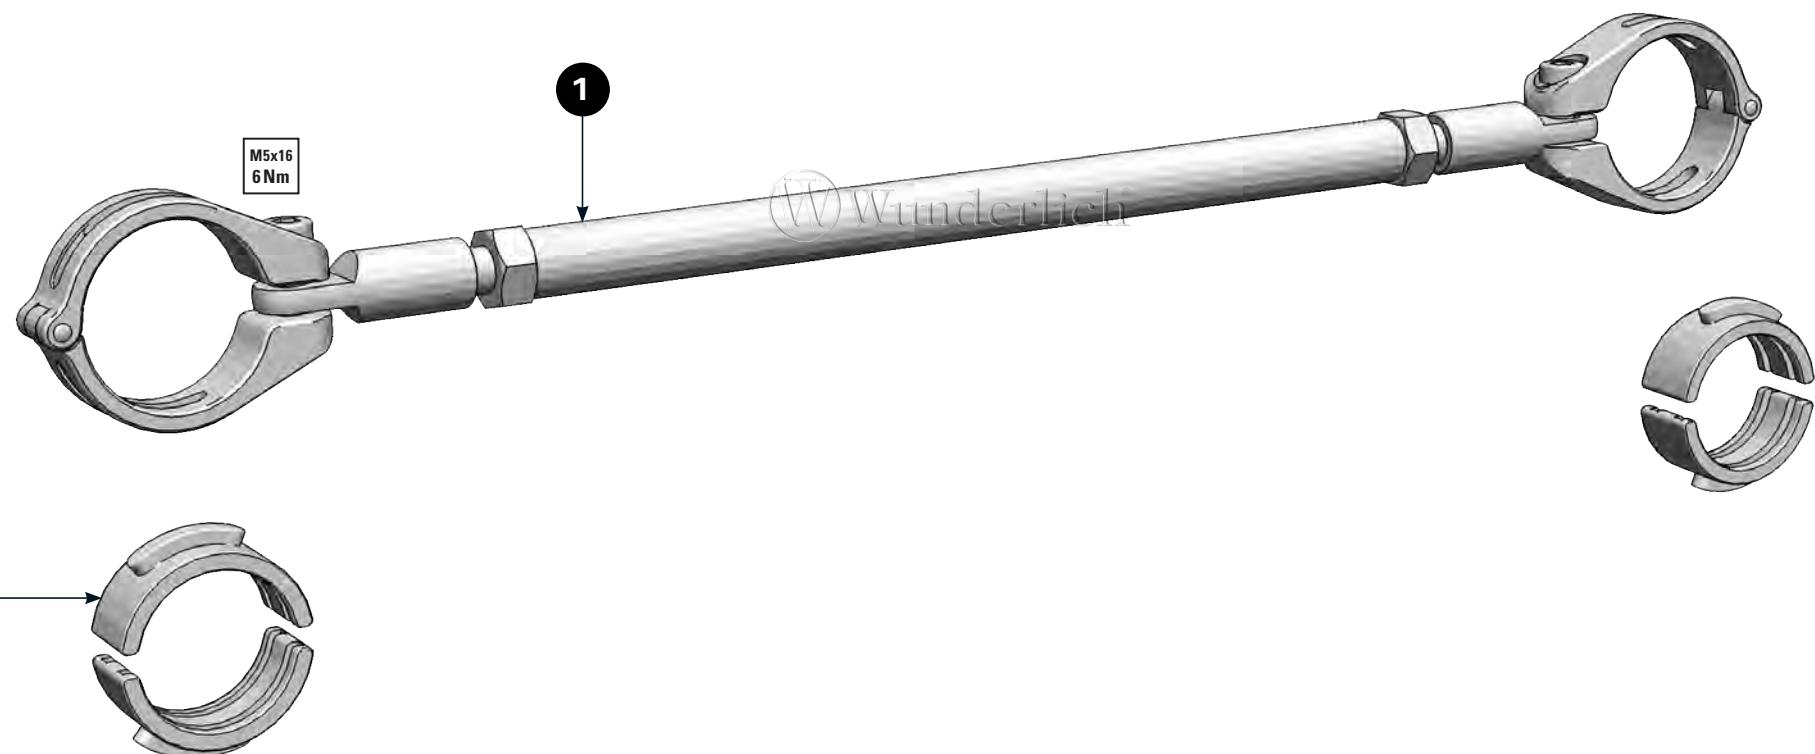

LEGENDE / KEY

Anbau Tipp
Fitting tip

Schraube
Screw

Achtung
Attention

Schraubensicherung
Thread locking fluid

Vergrößerung
Magnification

M10x14 Nm
Drehmoment
Torque

#	BEZEICHNUNG / DESCRIPTION	MENGE / AMOUNT
1	Lenkermittelstrebe vormontiert	1
2	Reduzierung 25.5mm	2
3	Reduzierung 28.5mm	2

Je nach Fahrzeug-/Lenkertyp müssen die passenden Reduzierungen verwendet werden. Demnach können auch die verschiedenen Reduzierungen Seitengleich kombiniert werden.

It not only depends on the vehicle you're riding but also on the handlebar mounted to your bike to determine the reductions. Therefore the different reductions can be combined symmetrically to get the perfect size to your bike / handlebar combination.



Lenkerstrebe zentrieren, Klemmschellen montieren und danach die Mittelstrebe fixieren (Mutter Rechts- / Linksgewinde).
Centre the crosstie of the handlebar and mount the clamp. Now fix the center brace with a left- and right-hand thread nut.