


VERBUNDSTREBE FÜR OFFROAD

Center strut | Puntal entre barras | Traverse | Traversa

Artikel.-Nr: 26441-20x

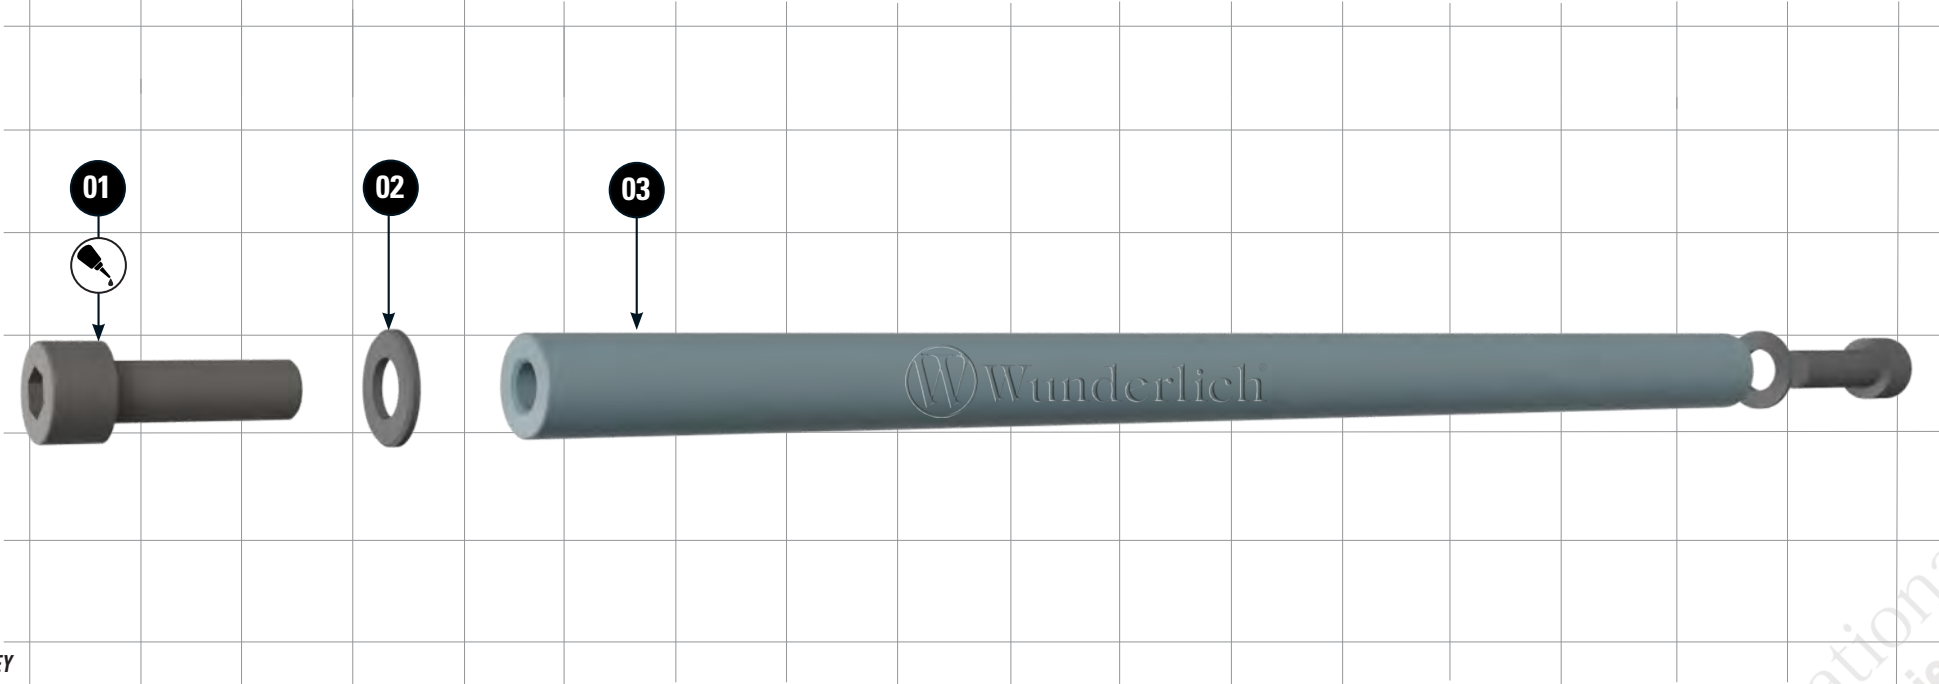

LEGENDE / KEY

-  Anbau Tipp
Fitting tip
-  Schraube
Screw
-  Achtung
Attention
-  Schraubensicherung
Thread locking fluid
-  Vergrößerung
Magnification
- M10x14
Nm

Drehmoment
Torque
-  Montagepaste
Fitting lubricant

#	BEZEICHNUNG	MENGE
1	DIN/ISO 7380SA2-8-20-TX Linsenkopfschraube / <i>pan head screw</i>	2
2	DIN125 (ISO 7089) U-Scheibe / <i>washer</i>	2
3	Verbundstrebe / <i>center strut</i>	1

01



MODELL BMW R 1200 GS/R/RS LC
For model BMW R 1200 GS/R/RS LC

MODELL BMW R 1200 GS LC RALLYE ODER HOHEM FAHRWERK
For model BMW R 1200 GS LC Rallye or high suspension

FAHRTRICHTUNG
DRIVING DIRECTION

M8x20
17Nm

VOR DER MONTAGE DIE OBEREN SCHRAUBEN DES MOTORSCHUTZBÜGELS LÖSEN.
Before mounting, loosen the top screws of the engine guard.