


RASTENVERLEGUNG

Footrest lowering | Abaissement des repose-pieds | Adaptador para bajar estriberas | Abbassamento pedane


Art.-Nr: 90321-002

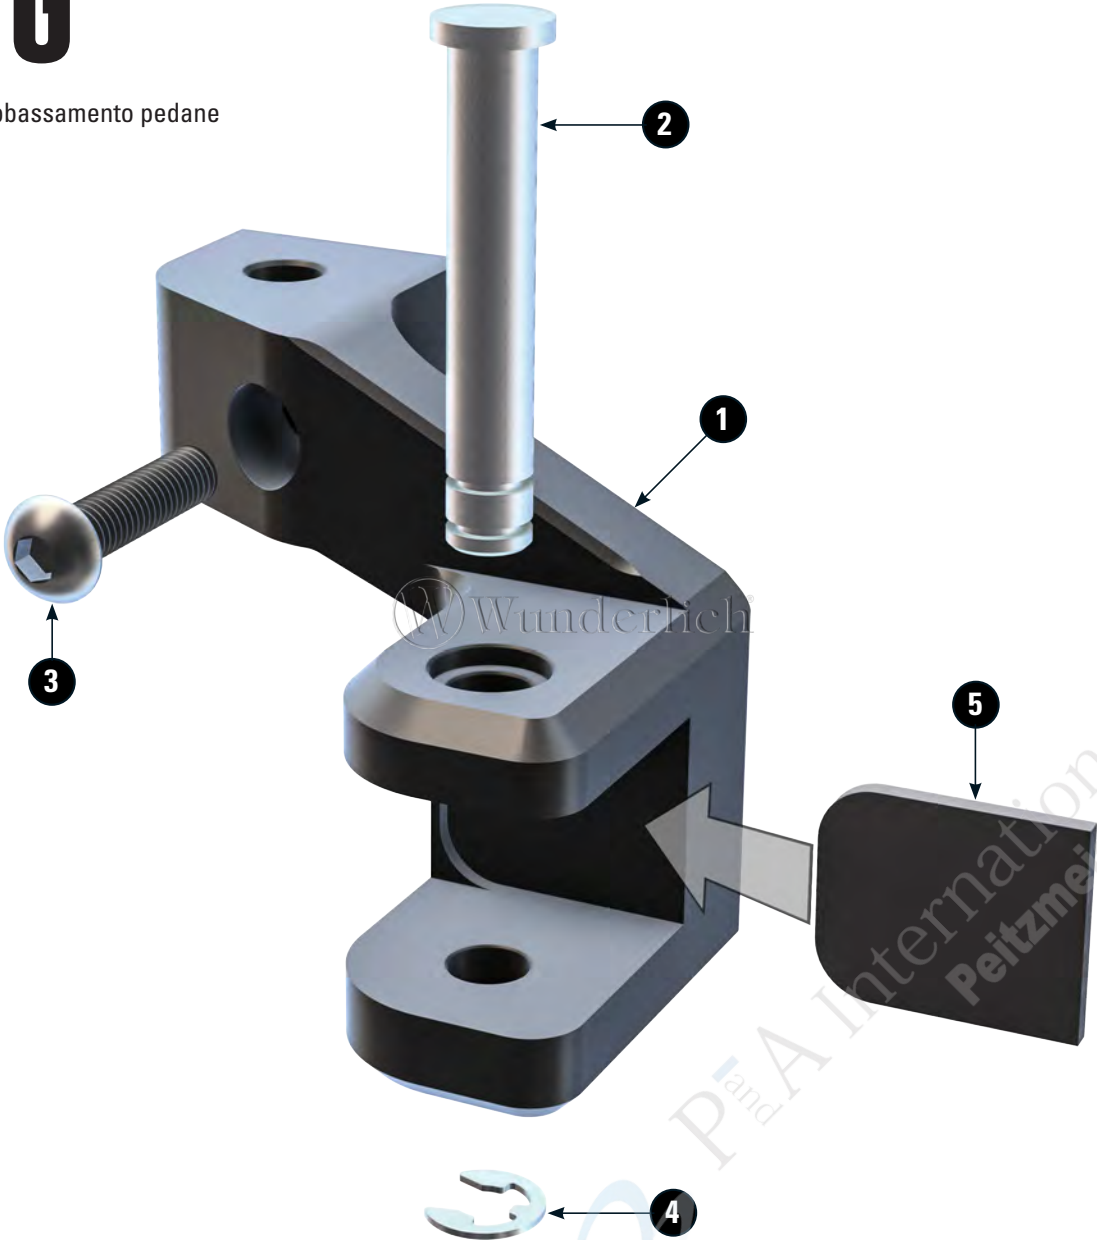

LEGENDE/KEY/FILE LÉGENDE

- Anbau Tipp**
Fitting tip
Astuce de montage
- Achtung**
Attention
Attention
- Vergrößerung**
Magnification
Grossissement
- Montagepaste**
Fitting lubricant
Lubrifiant de montage

- Schraube**
Screw
Vis
- Schraubensicherung**
Thread locking fluid
Freinilets
- Drehmoment**
Torque
Torque
- Reiniger**
Cleaner
Nettoyant



#	Bauteil component composant	DE Die Farben der Abbildungen dienen nur der Veranschaulichung. EN The colors are for illustrating purposes only. FR Les couleurs utilisées sont à titre indicatif seulement.	DIN	ISO	Menge quantity quantité
1	Rastenverlegung (links/rechts) / Footrest lowering (left/right)				2
2	Bolzen / Pin				2
3	Linsenkopfschraube / Lens head screw M6x25		7380	7380	2
4	Sicherungsclip / Locking clip 6mm		6799	6799	2
5	Gummipuffer (selbstklebend) / Rubber pad (self-adhesive)				2

